

BluDot Brake Actuation System

Theory of Operation
and
Installation

BluDot

What is it?

- A brake actuation system
- NOT an air brake system – it is air *over* hydraulics
- Works on trailers with hydraulic brakes
- Converts tractor air pressure to hydraulic pressure at a constant and proportionate ratio
- Is a similar braking system to what semi-trailers use

BluDot

Why use it?

- It is “perfectly” proportional – it is as if there is only ONE unit
- The entire system is simpler than electric/hydraulic systems
- It uses DOT-certified components tested over billions of miles in commercial operation
- There is NO brake controller – it uses the tractor air system
- There is no electrical or mechanical pickup to supply brake controller signal
- Your tractor is *designed* around air systems
- There is NO electrical connection or conversion
- There are no plugs to go bad (electrically)
- There is no hydraulic pump to “spool up” before brakes actuate, so less delay

BluDot Cons....

- You have airlines running between truck/trailer
- You **must have** a vehicle with air brakes tow the trailer
- You truck will not have a conventional controller to tow other trailers (unless you add one)
- Resale of trailer may be affected (requires air)
- Some manufacturers will not install (no skills)
- It **may** be more expensive because of installation costs

BluDot Components



10/8/2012

Jack Mayer

BluDot TH-Series Air/Hydraulic Trailer Brake System

Air relief line – should be at bottom of tank.

From tractor service line (blue)

Input and Emergency Valve

Control Valve. Output goes to actuator


From tractor emergency line

Notes:

- The control valve detects application pressure from brake system, draws air from storage tank, and passes proportional pressure to actuator
- The input/emergency valve passes air thru and detects breakaway trailer conditions. In breakaway max air pressure from tank is routed to actuator via control valve
- All airlines are 3/8"

Tractor emergency line air keeps tank at 90-130 psi

RV1 Valve goes in this line

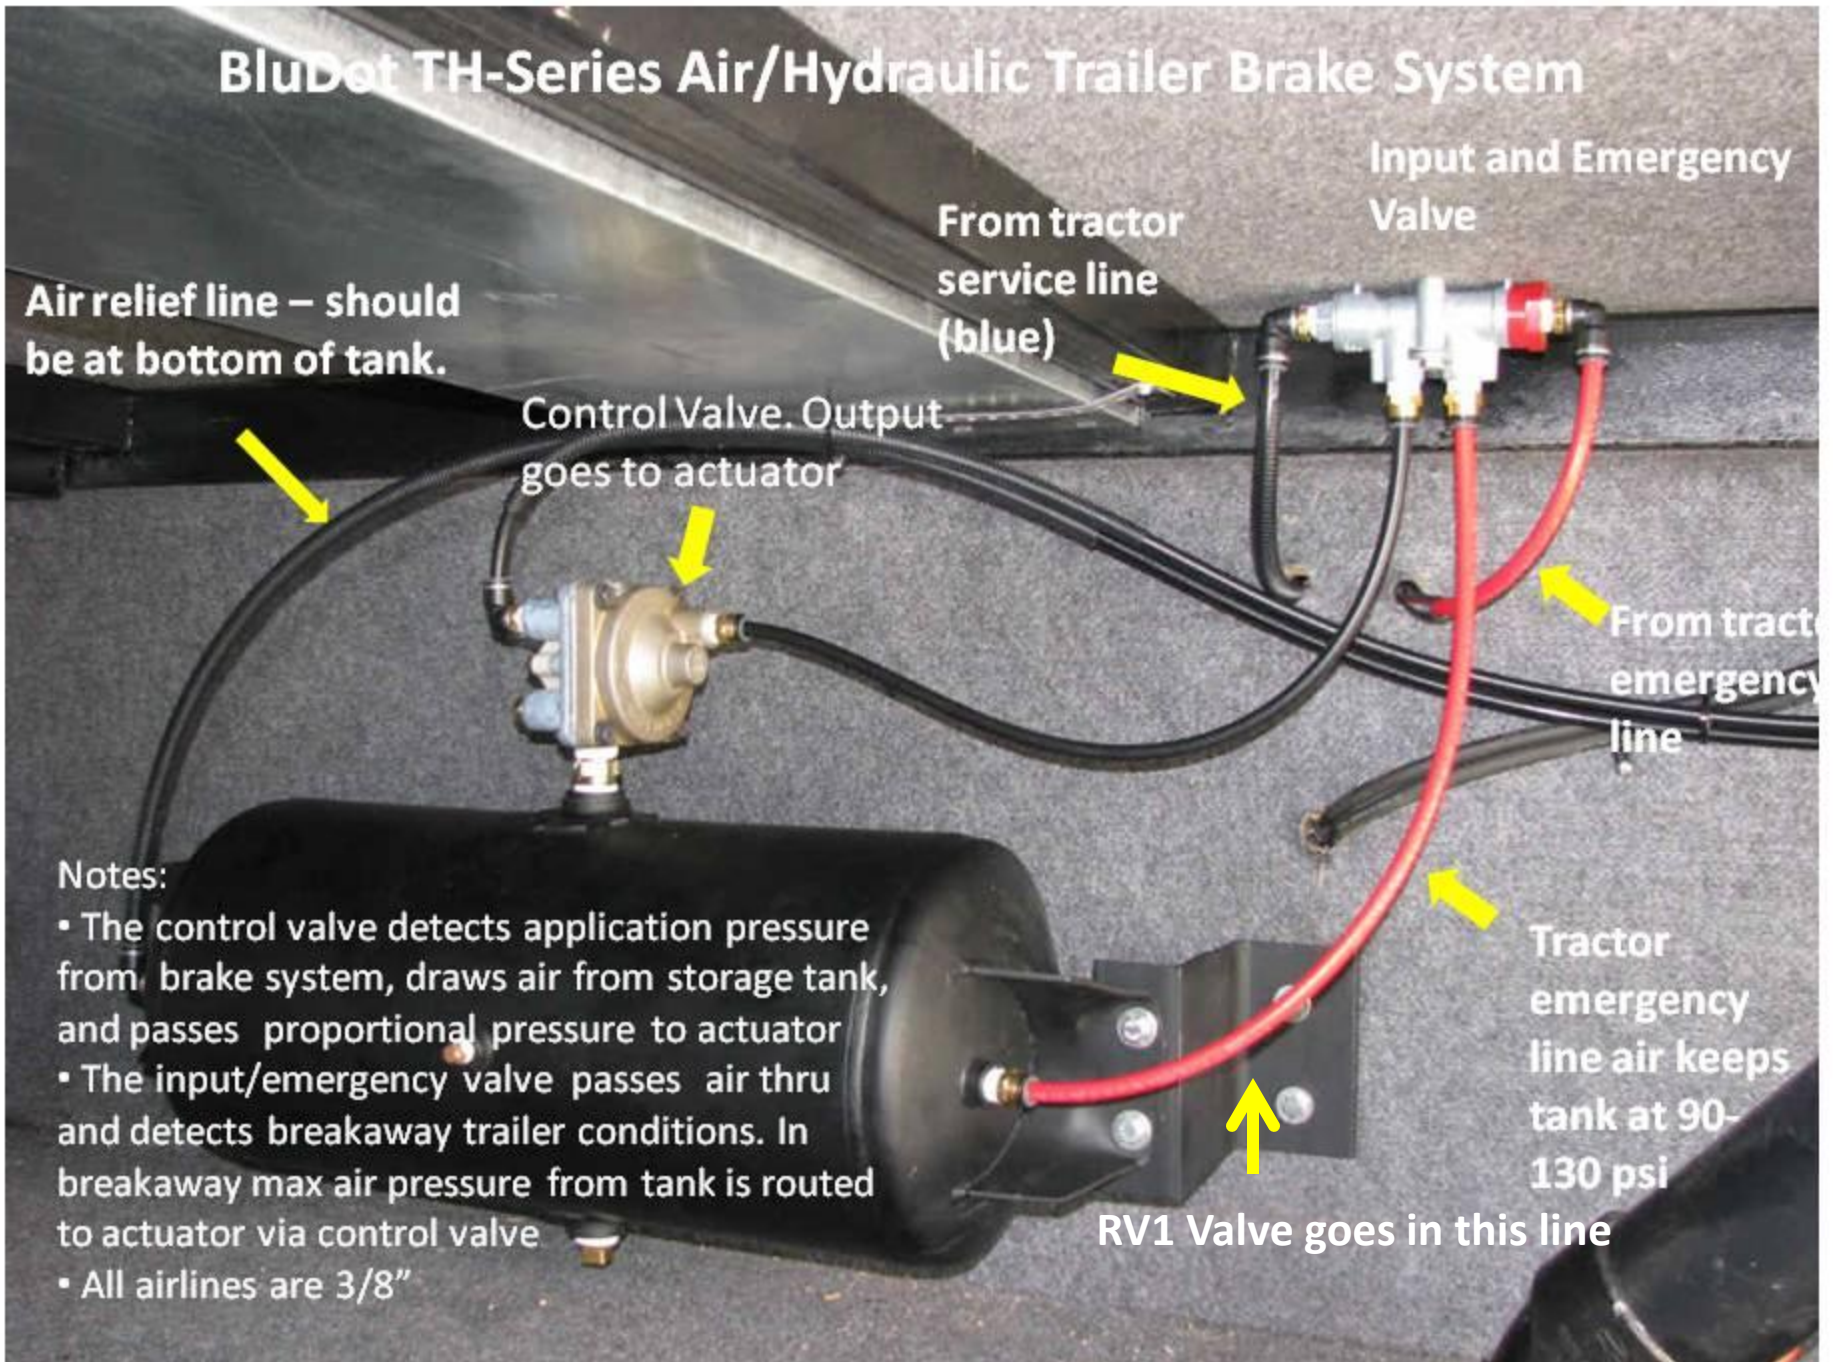

BluDot

How does it work?

- Service air and emergency air supplied via gladhands to trailer
- Service air is “signal” and provides proportioning
- Emergency air is stored in tank on trailer
- “Proportioning” valve takes air from tank at same level as service air and applies it to a brake can which drives a master cylinder
- Master cylinder mechanically converts air pressure to hydraulic line pressure and “amplifies” the pressure.
- Hydraulic pressure drives the brakes.

There is an emergency “breakaway” capability for air loss or disconnect

BluDot

Nuances and Enhancements

- Dexter brakes work with unmodified BluDot systems (high line pressures permissible)
- Kodiak brakes require lower line pressures – must use a reducing valve on tank (pressure around 90psi, RV1 valve)
- Relief valve/water drain valve must be added
- Recommend a tank pressure gauge
- Gladhand placement is “backward” from commercial operation (gladhands stay with trailer)
- **Installation is sensitive to proper brake bleeding**
- **Recommend DOT 4 brake fluid**

Kodiak Modification Parts



BluDot TH-Series Air/Hydraulic Trailer Brake System

Air relief line – should be at bottom of tank.

From tractor service line (blue)

Input and Emergency Valve

Control Valve. Output goes to actuator


From tractor emergency line

Notes:

- The control valve detects application pressure from brake system, draws air from storage tank, and passes proportional pressure to actuator
- The input/emergency valve passes air thru and detects breakaway trailer conditions. In breakaway max air pressure from tank is routed to actuator via control valve
- All airlines are 3/8"

Tractor emergency line air keeps tank at 90-130 psi

RV1 Valve goes in this line

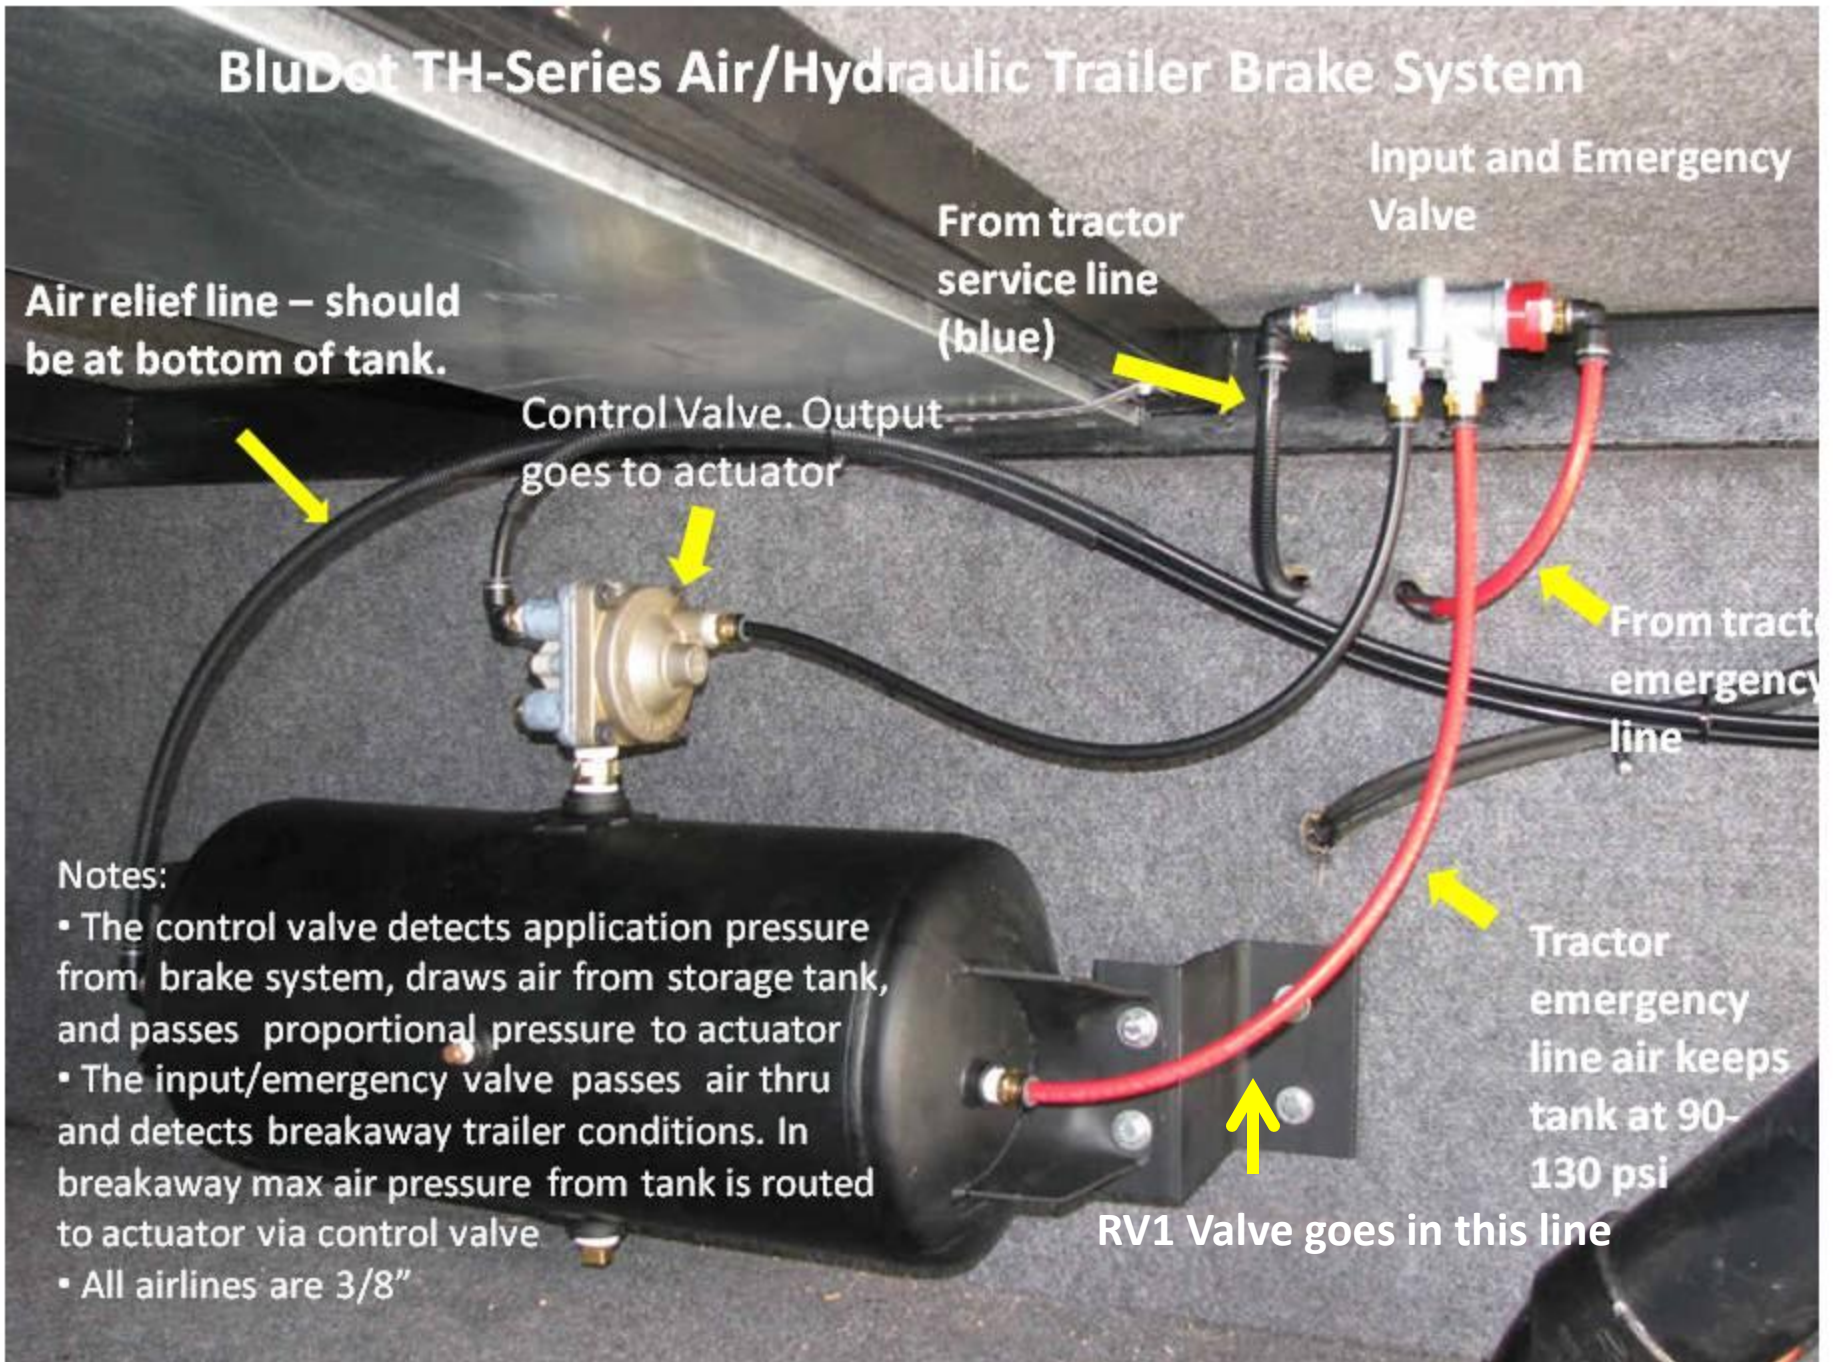


Blue and red plumbing.

RV1 Valve



Control Valve

Dual Actuators and Toad Brake

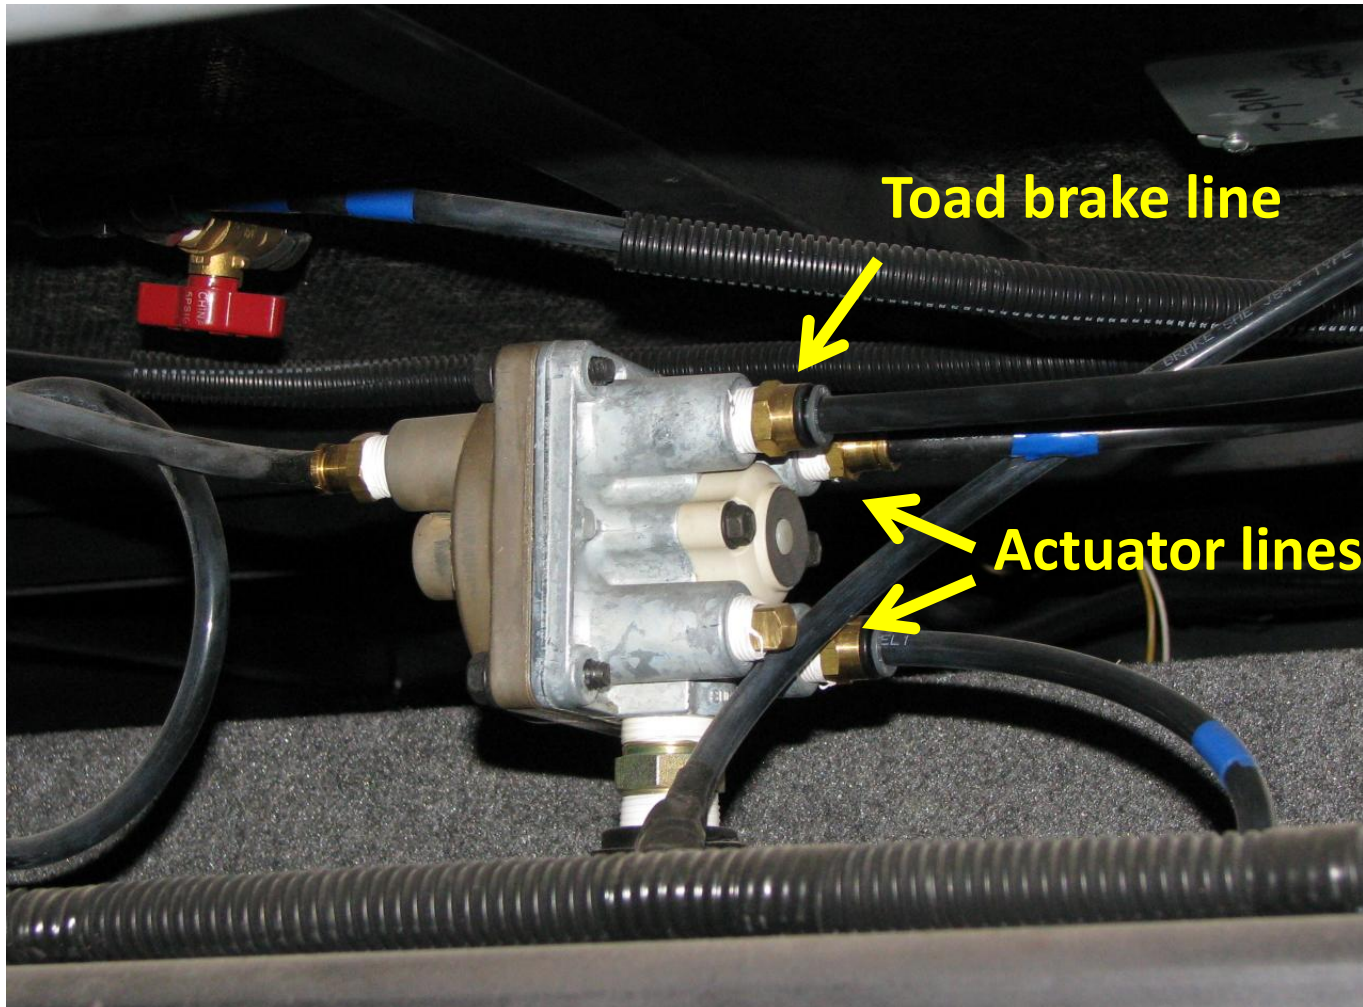


Actuator mounted to the mounting plate, metric bolts from BluDot.



Dual Actuators

- Top actuator controls front axle
- Bottom actuator controls rear two axles

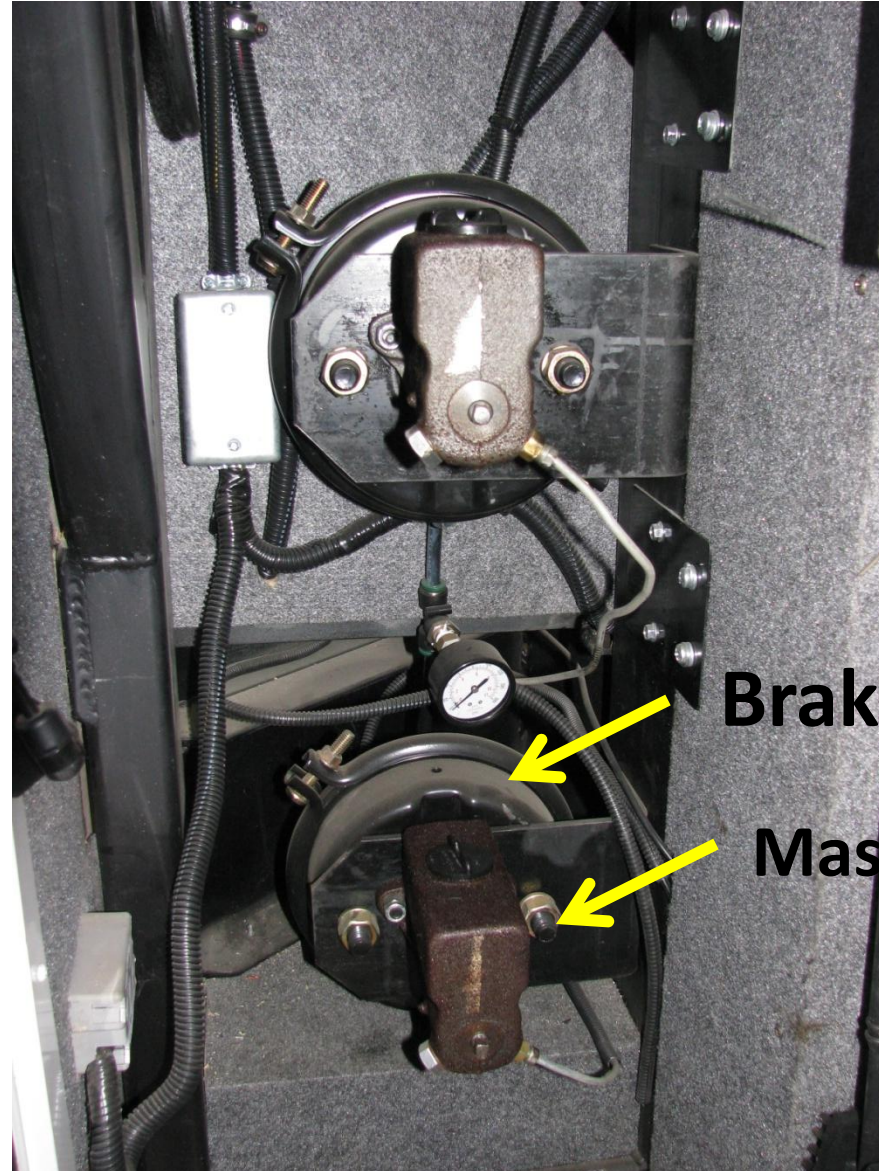

Brake Can

Master Cylinder



10/8/2012

Gladhand and Coils Mounting

- This can be difficult on a retrofit
- Two methods: through gooseneck, or across “gap”
- Coils mount to trailer and “stay with” trailer. This is a cleaner install than commercial method.
- Location of fittings on truck
 - Together or spread
 - Use of angled fittings
- Protection when not connected



10/8/2012

HDT Rally, 2012
Jack Mayer



10/8/2012

HDT Rally, 2012
Jack Mayer



10/8/2012

HDT Rally, 2012
Jack Mayer

Air lines installed.



10/8/2012

HDT Rally, 2012
Jack Mayer



10/8/2012

HDT Rally, 2012
Jack Mayer



10/8/2012

HDT Rally, 2012
Jack Mayer

Angled Gladhand Fitting

Matching Gladhand for weather protection (w/quick connect)

